



**Bracton Industries (NSW) Pty Limited**  
50 - 54 Chard Road,  
Brookvale NSW 2100 Australia  
Phone: +61 2 9938 1800  
Fax: +61 2 9905 0979

## **S-TYPE KEG COUPLER SERVICE INFORMATION.**

---



**Step 1:** Open the hinge pin by moving the retainer in line with the pin. Gently push out from the side with the hinged retainer as below.

**Step 2:** Remove the hinge pin and then slide the handle backwards to remove from the probe. To remove the probe push from the side with the thick black seal until it can be removed from the handle side..



**Step 3:** Replace the probe seal as show below. Note that the seal has a split design on one side, the solid side of the seal face is to be installed so that it is visible.



**Step 4:** There are 2 seals in the body of the keg coupler. Remove these and replace.



**Step 5 :** The last seal to change on the S-type keg coupler is the main gasket on the bottom of the coupler. The flat face of the seal is to be located against the body.



**Re-Assembly :** Insert probe into keg body (gasket end first). Have slot in line with hinge pin entry.



Push in hinge pin and fasten in place.