



Bracton Industries (NSW) Pty Limited
50 - 54 Chard Road,
Brookvale NSW 2100 Australia
Phone: +61 2 9938 1800
Fax: +61 2 9905 0979

UNIVERSAL / GRUNDY / BRUMBY / IRIIDIUM TAP SERVICE INFORMATION.



Step 1: remove coupler nut and shank (use of a C-spanner is recommended)



Step 2: loosen and remove handle lever assembly by rotating bonnet nut anti-clockwise. Pull lever away from tap.



Step 3: Push piston through the body of the tap so that it can be removed from the threaded entrance into the tap.



Step 4: Remove shaft o ring from piston and main dome seal & replace



Step 5: Remove real coupler seal for tap shank from threaded end of tap.



Bracton Industries (NSW) Pty Limited

50 - 54 Chard Road,

Brookvale NSW 2100 Australia

Phone: +61 2 9938 1800

Fax: +61 2 9905 0979



Standard replacement. seals requiring



Re-assembly :
Step 6: Push in piston into tap body.



Line up slotted hole as shown in picture



Step 7: Install white nylon friction with depression facing downwards. Install black friction gasket on top and screw bonnet nut clockwise. Tap should move fluidly with light pressure. Firm but free movement.



Step 8: Replace coupler gasket and fit shank. Fit coupler nut and gently tighten with C-spanner. Replace shank O-ring.