



# Machine operating instructions

## 1 - SWITCH ON



To switch on the machine, press and hold line button IL for 3 seconds.

## 2 - FILLING



During the filling, CHECK - LTV - COLD RINSE and 1 minute cycle LEDs are lit. When the water reaches the right level in the tank, LTV LED goes OFF and it will go ON again when the water in the tank achieves the correct temperature.

## 3 - CYCLE SELECTION



By pressing the CYCLE button, 1 minute cycle LED or SOAK CYCLE LED (3 minutes) will light. With this button, it is possible to choose the cycle length the machine will perform.

## 4 - COLD RINSE SELECTION




By pressing the COLD RINSE button, it is possible to switch ON or OFF the COLD RINSE LED. When this LED is lit, the machine performs 10 seconds of adding cold rinse at the end of the cycle. (UC 500: COLD RINSE NOT PRESENT)

## 5 - WASH CYCLE



To start the wash cycle, press and hold the START button for a second. The selected cycle LED (1 minute or SOAK) will flash during all the cycle length.

## 6 - DRAIN THE MACHINE

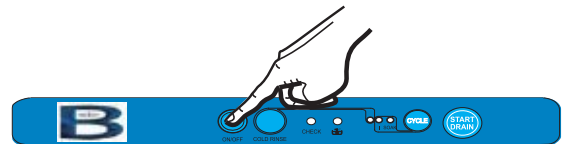

To drain the water in the tank, switch OFF the machine and release the overflow tube. When the tank is empty, remove the filters in the tank and clean them.

## 7 - DRAIN A MACHINE WITH DRAIN PUMP - (NOT IN ALL MACHINES)



With machine switched ON and door open, remove the overflow tube and press DRAIN (START) button for 3 seconds till the selected cycle and CHECK LEDs will flash together. To interrupt the drain cycle, switch OFF the machine or press START button again.

Summary table of CHECK LED signals

Machine status	LED CHECK
Machine OFF	OFF
Machine switched ON (Stand-by)	ON constant
Cycle: washing, pause, rinsing	ON constant
Alarm: lack of heating	RAPID flashing
Alarm: door open	RAPID flashing
Manual drain	RAPID flashing