





Bracton Industries (NSW) Pty Limited
50 - 54 Chard Road,
Brookvale NSW 2100 Australia
Phone: +61 2 9938 1800
Fax: +61 2 9905 0979

A-TYPE KEG COUPLER SERVICE INFORMATION.

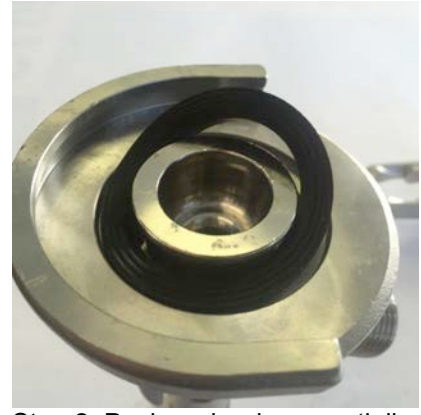

Step 1: Unclip hinge pin and remove pin, slide handle back to remove.



Step 2: Push probe down partially and remove main keg gasket.

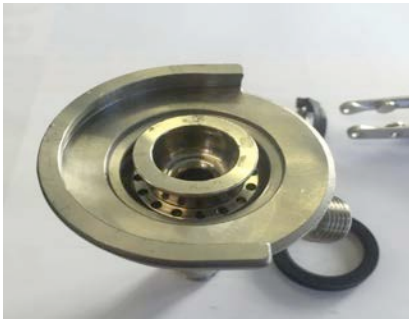


Step 3: Push the probe through the body and remove from below.



Step 4: There are 2 seals in the body of the keg coupler. Remove these and replace.

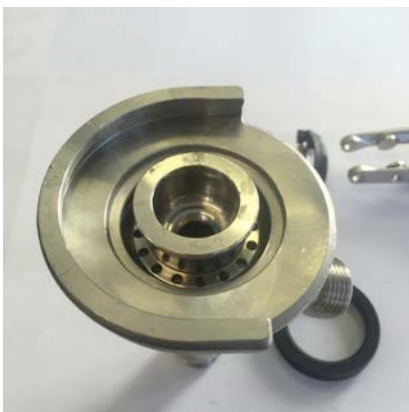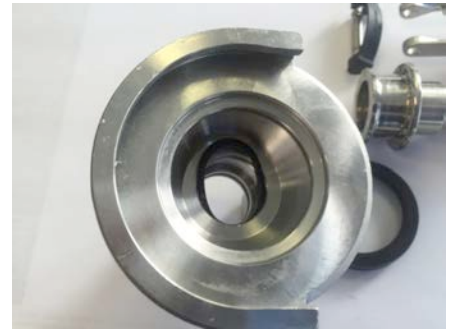

Re-Assembly : Replace the probe by inserting the threaded end of the probe into the body and slide in as shown below. Refit new keg seal.

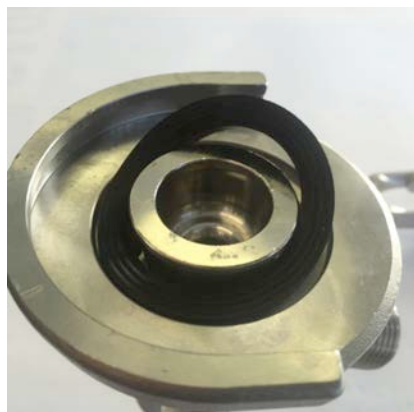

Line the probe "flats" in line with hinge pin entry. Push in hinge pin and fasten in place.. Push in hinge pin and fasten in place.