



**Bracton Industries (NSW) Pty Limited**  
50 - 54 Chard Road,  
Brookvale NSW 2100 Australia  
Phone: +61 2 9938 1800  
Fax: +61 2 9905 0979

## **D-TYPE KEG COUPLER SERVICE INFORMATION.**

---



Step 1: Unclip hinge pin and remove pin, slide handle back to remove.



Step 2: Using a small flat head screwdriver or O-ring pick, remove white probe gasket to allow removal of probe. Push probe from gasket end out of the top of the keg coupler body



Step 3: There are 2 seals in the body of the keg coupler. Remove these and replace.



Step 4: The last seal to change on the D-type keg coupler is the main gasket on the bottom of the coupler. (see below) The flat face of the seal is to be located against the body.



**Re-Assembly :** Insert probe into keg body (gasket end first). Have slot in line with hinge pin entry. Once probe is in the keg coupler body fit new white probe gasket.



**Note: if the gasket is fitted before putting the probe into the coupler, it will not go back together.**



Replace the probe by inserting the threaded end of the probe into the body and slide in as shown below. Refit new keg seal.



Push in hinge pin and fasten in place.