

Step 1: Press MODE, change to working position (4 working positions as below), continue to press MODE, change the position automatically, choose ON-OFF, (photo 4), press ENTER to confirm, and enter second step.



(1) : OFF-ON



(2) : ON



(3) : OFF



(4) : ON-OFF

Step 2: adjust time of open position to drain water inside tank. Type: hours: minutes:seconds, and we suggest the time for drain water is no more than 3 seconds. Pressure ADD to set number one by one, and press ENTER to confirm, after finished set, press ENTER, and enter step 3



Step 3, adjust time of close position to drain water inside air tank. Type: hours: minutes:seconds, we suggest not less than 8 hours, and Pressure ADD to set number one by one, and press ENTER to confirm, after finished set, press ENTER, and enter step 4



Step 4: when finished set of on and close time of electrical drain valve, press MODE to confirm, and now everything is ok. At this time, you also can press RESET to test electrical drain valve.