


NEW FOR 2010 MARK 4 DISPENSER

Wunder-Bar® Post-Mix Bar Dispenser


Innovations for Ease of Service and More Reliability

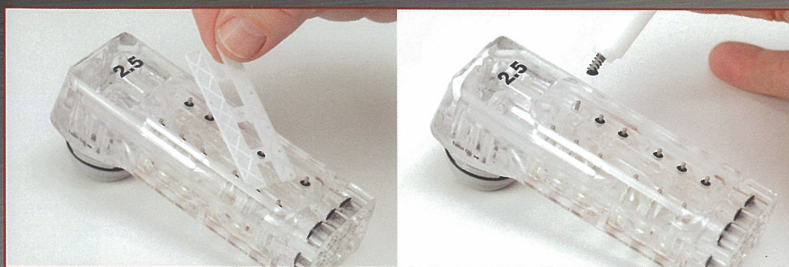

← Replace stem seal O-ring from the top of the handle, not the bottom, even under pressure. Retainer plate is removed, then O-ring.




← NEW shut-off screw includes soft-tip for positive shut-off.

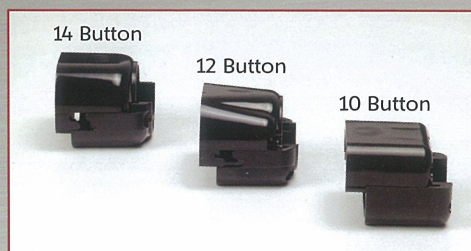

← All handle heels now include split heel design.



↑ Sanitary drip tray design catches any nozzle drip and provides sanitary air-gap from nozzle. Nozzle stays clean. New drip tray is NSF listed.

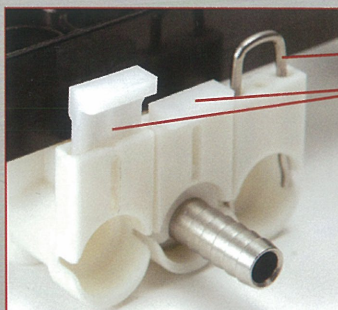

← NEW Kwik Klip stays put. Won't pull out.



AUTOMATIC BAR CONTROLS, INC.

Setting the Standards for over Thirty Five Years

790 Eubanks Drive | Vacaville, California 95688 | 1-800-722-6738 | (707) 448-5151 | Fx: (707) 448-1521

Patents Pending


www.wunderbar.com

Wunder-Bar®


NEW FOR 2010 MARK 4 DISPENSER

Wunder-Bar® Post-Mix Bar Dispenser

Innovations for Ease of Service and More Reliability

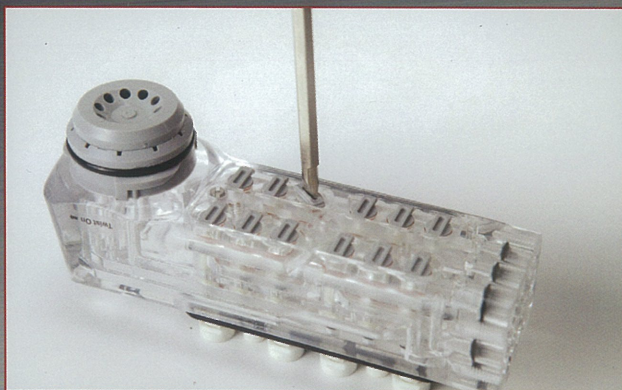

Locking hat plugs allow for service to one valve cavity at a time. Plugs stay put, even under pressure.

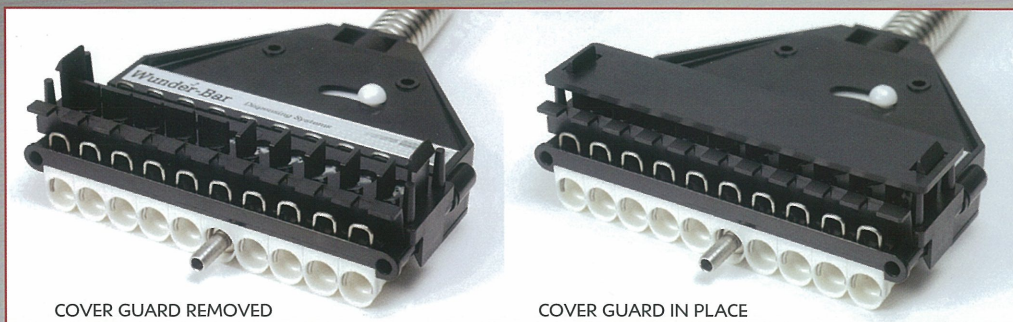

COVER GUARD REMOVED

COVER GUARD IN PLACE



Optional shut off screw extensions allow the shut off screws to be turned off/on with finger and thumb. Includes cover guard. Order with or without this feature.



Manifold end of flex-hose assembly now includes a welded stainless steel bushing, not plastic. Optional barrier tubing prevents flavor cross-over from pungent beverage syrups.



Models Available



Intertek
3016449
CONFORMS TO
NSF STD 18

AUTOMATIC BAR CONTROLS, INC.
Setting the Standards for over Thirty Five Years

790 Eubanks Drive | Vacaville, California 95688 | 1-800-722-6738 | (707) 448-5151 | Fx: (707) 448-1521

Patents Pending

www.wunderbar.com

Wunder-Bar®